SEKONDA

Instruction Guide and 2 Year Guarantee Your SEKONDA watch is guaranteed against defects in materials and workmanship for a period of 2 years from the date of purchase. During this period, we will exchange or repair, at our discretion, any defective components.

IMPORTANT - Not covered by Guarantee

- Batteries, straps and bracelets.
- Damage caused by accident, misuse or lack of care.
 Water penetrations, except in watches marked as
- 'Water Resistant'.
 4. General wear and tear.
 5. Unauthorised repairs.

SERVICING AND REPAIRS UNDER GUARANTEE Please post your watch, together with the guarantee slip and a brief note to explain the nature of the fault, by Registered Post or Recorder Delivery to the address shown. DO NOT send the

presentation box as this will NOT be returned.

SERVICING AND REPAIRS OUTSIDE OF GUARANTEE

Available at a reasonable charge after an estimation has been

Available at a reasonable charge after an estimation has been sent by T.P. (UK) Ltd. Send your watch to us by Registered Post or Recorded Delivery to the address shown.

Important Note

If, after reading this instruction guide, you have any further questions regarding the use, operation or adjustment of your watch, please call us during office hours on 0116 288 2500.

If your watch is water resistant, it will clearly state 'Water Resistant or have a static water pressure indication (e.g. 30/50/100/200 metres) on the dial and/or case back. If it is not marked as water resistant, it should not be allowed to come in to contact with water or be worn in conditions that could expose it to moisture (e.g. washing, heavy rain etc.). Certain chemicals in water may damage the watch seals. To maintain water resistance, we recommend that your watch is serviced and re-sealed at least every 12 months by T.P. (UK) Ltd.

IMPORTANT

Buttons must not be operated while in contact with water.

WATER RESISTANT or RESISTANT TO 30 METRES

Suitable for normal everyday use and will resist exposure to splashes and rain; it is NOT designed to be used whilst bathing or swimming.

WATER RESISTANT TO 50 METRES


As 30 metres plus bathing or swimming.

WATER RESISTANT TO 100 METRES

As 50 metres plus pool side diving and snorkelling, but NOT high board diving or scuba diving.

WATER RESISTANT TO 200 METRES

As 100 metres plus scuba diving, but NOT high board diving.

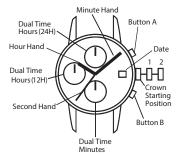

Attach Receipt or Proof of Purchase; failure to attach may invalidate quarantee.



	DUAL TIME WITH DATE	DUAL TIME WITH DATE	DUAL TIME WITH DATE	DUAL TIME WITH DATE
Guarantee	SETTING THE TIME	RE-ALIGNING THE DUAL TIME HANDS	SETTING THE DUAL TIME	Dual Time Minute Setting – Continued
Block Capitals	 When the second hand reaches the 12 position, 	Important Note	Note	· ·
Name	pointing straight up, pull the crown out to position '2'.	In some cases the dual time hands may be out of alignment. ALWAYS re-align the dual time hands	When you are in another country/area with a different time zone, adjust the dual time hands to show the local time by	Do not be alarmed as these are normal functions*
Address	Turn the crown clockwise or anti-clockwise to adjust the hour and minute hands until your desired time is shown.	before setting the dual time - as instructed on the following page. To re-align the dual time hands, please follow the instructions below.	following the instructions below. Dual Time Hour Setting	3. Push the crown back in to the normal position.
	3. Push the crown back in to the starting position.	Pull the crown out to position '2'. Press and hold the 'A' & 'B' buttons at the same time.	 Start with the crown at the normal position. Adjust both the dual time 12 hr & 24hr hands by 	
	Important Note When you set the time, you must make sure that the AM	for more than 2 seconds. Release both buttons 'A' & 'B' at the same time. *Both the 24hr hand and the	pressing the 'A' button (-1hour) or by pressing the 'B' button (+1hour) until your desired hour is shown.	
Post Code	/PM is set correctly. The date changing indicates that it is midnight.	dual time minutes hand will rotate and then bounce	*Every time you press the 'A' button (-1hour) or press the 'B' button (+1hour) the dual time minutes hand	
Daytime Phone	SETTING THE DATE	 back to the positions at which they started* Press the 'A' button repeatedly until the 24hr hand reaches the 24 position. (Pointing straight up). 	will rotate 4 whole times. Do not be alarmed as this is a normal function*	
For free bracelet adjusting service, return the watch to the address below. T.P. (UK) Ltd, Alexander House, Chartwell Drive, Wigston, Leicester LE18 2EZ	Pull the crown out to position '1'. Turn the crown clockwise until your desired date is shown. Push the crown back in to the starting position.	4. Press and hold the 'A' button to turn the 24hr hand quickly. 5. Press and hold the 'B' button to turn the 12hr hand until it reaches the 12 position. (Pointing straight up).	Dual Time Minute Setting 1. When the second hand reaches the 12 position, pointing straight up, pull the crown out to position '2'.	
This guarantee should be retained by the owner of the watch and should be sent to T.P. (UK) Ltd. together with the watch and £6.00 to cover the handling and postage when service under guarantee is required. Please refer to servicing and repairs under quarantee for further information on service	Important Note DO NOT attempt to set the date between 9:00pm and 1:00am as the date cycle is already in progress. This can cause the date to change incorrectly. If you do need to change the date during this period of time, first change	*Both the 12hr hand and the dual time minutes hand will turn at the same time* 6. Push the crown back in to the normal position. Important Note	 Adjust the dual time minutes hand by pressing the 'A' button (-1 minute) or by pressing the 'B' button (+1 minute) until your desired time is shown. "The dual time minutes hand will rotate 1 whole time every time 15 minutes is added or subtracted by pressing 	
under guarantee. This guarantee does not affect your statutory rights.	the time to any time that is not between 9:00pm and 1:00am; Then set the date. After you have set your desired date you may re-set the time.	Please repeat the above dual time re-aligning steps IF the dual time minutes hand rotates one whole time, without prompt, at either the 15, 30, 45 or 60 positions -	the 'A' & 'B' buttons – while setting the dual time minutes* *The 12hr & 24hr dual time hands may also rotate in accordance with the dual time minutes hand.	