

Service and Repairs

Your SEKONDA watch is guaranteed against defects in materials and workmanship for a period of 2 years from the date of purchase. During this period, we will exchange or repair, at our discretion, any defective components free of charge.

IMPORTANT - Not covered by Guarantee

1. Batteries, straps and bracelets.
2. Damage caused by accident, misuse or lack of care.
3. Water penetrations except in watches marked as "Water Resistant".
4. General wear and tear.
5. Unauthorised repairs.

SERVICING AND REPAIRS UNDER GUARANTEE

Please post your watch, together with the Retailer's Sales Receipt or proof of purchase, the completed Guarantee slip, and a brief note to explain the nature of the fault, by Registered Post or Recorded Delivery to the address shown. Do not send the presentation box as this will NOT be returned.

SERVICING AND REPAIRS OUTSIDE OF GUARANTEE

Available at a reasonable charge after an estimate has been sent by T.P. (UK) Ltd. Send your watch to us by Registered Post or Recorded Delivery to the address shown.

Important Note

It is important to identify your watch correctly. If, after reading this Instruction Guide, you have any further questions regarding the use, operation or adjustment of your watch, please call us during office hours on 0116 288 2500.

T.P. (UK) Ltd, Alexander House, Chartwell Drive, Wigston, Leicester
LE18 2EZ
United Kingdom.

Water Resistance

If your watch is water resistant, it will clearly state "Water Resistant" or have a static water pressure indication (e.g. "30/50/100/200 metres") on the dial and/or case back.

If it is not marked as water resistant, it should not be allowed to come into contact with water or be worn in conditions that could expose it to moisture (e.g. washing, heavy rain etc.). Certain chemicals in water may damage the watch seals. To maintain water resistance, we recommend that your watch is serviced and re-sealed at least every 12 months by T.P. (UK) Ltd.

IMPORTANT

Buttons must not be operated while in contact with water.

WATER RESISTANT or RESISTANT TO 30 METRES

Suitable for normal everyday use and will resist exposure to splashes and rain; it is NOT designed to be used whilst bathing or swimming.

WATER RESISTANT TO 50 METRES

As 30 metres plus bathing or swimming.


WATER RESISTANT TO 100 METRES

As 50 metres plus pool side diving and snorkelling, but not high board or scuba diving.

WATER RESISTANT TO 200 METRES

As 100 metres plus scuba diving, but not high board diving.

Dual time with date - VD31

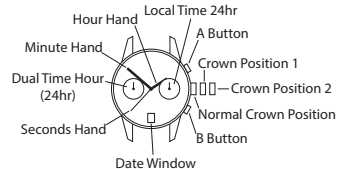

Resetting the dual time hour hand

Before setting the time, please ensure the dual time hour hand is at the '0' (24 hr) position. If the dual time hour hand is not at the '0' position, reset it by following the steps below.

1. Pull the crown out to position 2.
2. Press and hold both A & B buttons together for 2 seconds. The dual time hour hand will move and return to its original position.
3. Press the A button to move the dual time hour hand counter-clockwise or press the B button to move the dual time hour hand clockwise to the '0' position. **Note:** The dual time hour hand moves quickly if either button is held down.
4. Return the crown to the normal position.

GUARANTEE

PLEASE USE BLOCK CAPITALS

NAME

ADDRESS

POST CODE

DAYTIME TELEPHONE NUMBER

IMPORTANT

This guarantee slip should be retained by the owner of the product and should be sent to Timeproducts (UK) Ltd. together with the product and £6 to cover the handling and postage when service under Guarantee is required.



SEKONDA

Instruction Guide
and
2 year Guarantee



sekonda.co.uk

IS48A

GUARANTEE

DATE OF PURCHASE:

Retailers stamp if required or full name and address:

Please attach the receipt or proof of purchase; failure to attach these may invalidate this Guarantee.

This Guarantee does not affect your statutory rights.

IS48A/04-2019

Dual time with date - VD31 continued

Setting the local time hands

1. Pull the crown out to position 2.
2. Turn the crown to set the hour and minute hands to the correct time. **Note:** The local time 24hr hand will move in accordance with the hour hand. Please ensure this is also set correctly.
3. Return the crown to the normal position.

Setting the dual time 24hr hand

When moving to a country or area in a different time zone, adjust the dual time 24hr hand to the new time zone by following the steps below.

Quick set

1. With the crown in the normal position, press the A button (-1 hour) or press the B button (+1 hour) to move the dual time 24hr hand.

Precise set


1. Pull the crown out to position 2 when the seconds hand is at the 12 o'clock position.
2. Press the A button (-10 mins) or press the B button (+10 mins) to move the dual time 24hr hand.
3. Return the crown to the normal position.

Setting the date

1. Pull the crown out to position 1.
2. Turn the crown clockwise until the correct date is visible.
3. Return the crown to the normal position.

Important - Do not attempt to set the date between 9pm and 1am as the date change cycle is already engaged. If it is necessary to change the date during that time period, first adjust the local time hands to any time outside that period, set the date and then reset the local time hands back to show the correct time.

Dual time with date - VD35

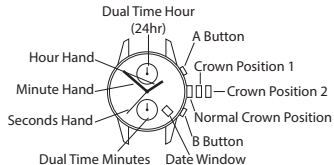

Resetting the dual time hands

Before setting the time, please ensure the dual time hands are at the '0' (24 hr) position. If the dual time hands are not at the '0' position, reset them by following the steps below.

1. Pull the crown out to position 2.
2. Press and hold both A & B buttons together for 2 seconds. The dual time hour hand will move and return to its original position.
3. Press the A button to move the dual time hour hand clockwise or press the B button to move the dual time minute hand clockwise to the '0' position. **Note:** The dual time hands move quickly if either button is held down.
4. Return the crown to the normal position.

Dual time with date - VD35 continued

Setting the local time hands

1. Pull the crown out to position 2.
2. Turn the crown to set the hour and minute hands to the correct time. **Note:** Please ensure the hands are set correctly to AM/PM. The moment the date changes is midnight.
3. Return the crown to the normal position.

Setting the dual time hands

When moving to a country or area in a different time zone, adjust the dual time hands to the new time zone by following the steps below.

Quick set

1. With the crown in the normal position, press the A button (-1 hour) or press the B button (+1 hour) to move the dual time 24hr hand.

Precise set

1. Pull the crown out to position 2 when the seconds hand is at the 12 o'clock position.
2. Press the A button (-1 min) or press the B button (+1 min) to move the dual time minute hand.
3. Return the crown to the normal position.

Setting the date

1. Pull the crown out to position 1.
2. Turn the crown clockwise until the correct date is visible.
3. Return the crown to the normal position.

Important - Do not attempt to set the date between 9pm and 1am as the date change cycle is already engaged. If it is necessary to change the date during that time period, first adjust the local time hands to any time outside that period, set the date and then reset the local time hands back to show the correct time.