



Instruction Guide and 2 Year Guarantee

IS01

Contents

- 1 Service and Repairs/
Setting the Time – AM/PM
- 2 Water Resistancy
- 3–12 Operation and Adjustment

For free bracelet adjusting service, return the watch to the address below.

T.P. (UK) Ltd, Alexander House, Chartwell Drive, Wigston, Leicester LE18 2EZ

For maximum protection, please keep your watch in its presentation box when not in use.

Important Note

It is important to identify your watch correctly. If, after reading this Instruction Guide, you have any further questions regarding the use, operation or adjustment of your watch, please call us during office hours on **0116 288 2500**



sekonda.co.uk

SERVICE AND REPAIRS

Your SEKONDA watch is guaranteed against defects in materials and workmanship for a period of 2 years from the date of purchase. During this period, we will exchange or repair, at our discretion, any defective components.

IMPORTANT – Not covered by Guarantee

1. Batteries, straps and bracelets.
2. Damage caused by accident, misuse or lack of care.
3. Water penetration except in watches marked as "Water Resistant". (see page 2).
4. Unauthorised repairs and general wear.

SERVICING AND REPAIRS UNDER GUARANTEE

Please post your watch, together with the Retailer's Sales Receipt or Proof of Purchase, the completed Guarantee slip on the back cover of this booklet, and a brief note to explain the nature of the fault, by Registered Post or Recorded Delivery to the address shown. Do not send the presentation box as this will not be returned.

SERVICING AND REPAIRS OUTSIDE OF GUARANTEE

Available at a reasonable charge after an estimate has been sent by SEKONDA. Send your watch to us by Registered Post or Recorded Delivery to the address shown on the inside front cover.

SETTING THE CORRECT TIME (AM/PM) – DATE WATCHES

- If the DATE changes when the hands are turned past 12 o'clock, the time shown is "am".
- If the DATE does not change, the time shown is "pm".

1

WATER RESISTANCY

If your watch is water resistant, it will clearly state "Water Resistant" or have a static water pressure indication (eg "30/50/100 metres") on the dial and/or case back.

If it is NOT marked as water resistant, it should not be allowed to come into contact with water or be worn in conditions that could expose it to moisture (eg washing, heavy rain etc). Certain chemicals in water may damage the watch seals. To maintain its water resistance, we recommend that your watch is serviced and re-sealed at least every 12 months by SEKONDA.

IMPORTANT Buttons must not be operated while in contact with water.

WATER RESISTANT or RESISTANT TO 30 METRES

Suitable for normal everyday use and will resist exposure to splashes and rain; it is NOT designed to be used while bathing or swimming.

WATER RESISTANT TO 50 METRES

As 30 metres plus bathing or swimming.

WATER RESISTANT TO 100 METRES

As 50 metres plus poolside diving and snorkelling, but NOT highboard or scuba diving.

WATER RESISTANT TO 200 METRES

As 100 metres plus scuba diving, but NOT high board diving.

MODELS WITH A SCREW-DOWN CROWN (BUTTON)

Unlock the crown by turning it anti-clockwise until free. Lock it by pressing in while turning clockwise. WATER RESISTANCE is lost when the crown is in the UN-LOCKED position.

2

OPERATING AND ADJUSTING YOUR WATCH

Your quartz analogue watch is powered by a battery which was inserted at the time of manufacture and will require periodic replacement. New batteries can be supplied and fitted by your nearest SEKONDA stockist.

Quartz analogue watches do NOT require winding.

The button is used for hand/function setting only. When in use, ensure that the button is pushed FULLY IN to position "A". Failure to do so can result in excessive battery drain or damage to the hand setting/date mechanism.

The instructions and diagrams on the following pages are designed to demonstrate the adjustment of all models within our range.

Your watch may not have all of the characteristics shown and may have other buttons and dials in addition to those shown on individual diagrams.

3

QUARTZ NON-DATE WATCH TIME SETTING:

- Pull button out to position "B".
- Advance hands to correct time.
- Return button to position "A".



QUARTZ DATE WATCH DATE SETTING:

- Pull button out to position "B".
- Turn clockwise or anti-clockwise to set correct date.
- Return button to position "A".

NOTE: Do not use this function between 8.30 pm and 1.30 am as date change cycle is in progress.



4

DAY/DATE MOON PHASE WATCH MOON PHASE SETTING:

- Pull button out to position "B".
- Turn button clockwise to set correct moonphase (see enclosed leaflet for dates of moonphase).
- Return button to position "A".

DATE CORRECTION:

- Pull button out to position "B".
- Turn button anti-clockwise to set date.
- Return button to position "A".

DAY/TIME SETTING:

- Pull button out to position "C".
- Turn hands forwards until correct day and time are reached.
- Return button to position "A".



Instructions continued overleaf.

5

QUARTZ 3 EYE CHRONOGRAPH WITH DATE TIME/DATE SETTING:

See instructions on pages 4 and 5.

OPERATING CHRONOGRAPH:


- Push PB1 to start/stop chronograph.
- Push PB2 to reset.

CHRONOGRAPH ZERO RESET:

- Pull button out to position "C"
- Turn Chrono second hands return to zero position).

- Push PB1 to set Chrono second hand to 12.00 (zero) position.
- Return button to position "A".
- Push PB2 to set Chrono minute to 12.00 (zero) position.

HAND DISPLAYS

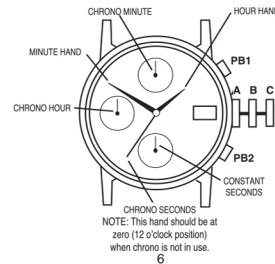

6

QUARTZ DAY/DATE WATCHES TIME SETTING:

- Pull button out to position "C".
- Advance hands to correct time.
- Return button to position "A".

DAY/DATE SETTING:

- Pull button out to position "B".
- Turn clockwise or anti-clockwise to set correct date.
- Turn clockwise or anti-clockwise to set correct day.

NOTE: Days of the week can be set in English or Spanish. Once set the watch will automatically indicate the day in the chosen language.

NOTE: Do not set day/date between 8.30 pm and 5.00 am as day/date change cycle is in progress.

Please also see alternative day/date



7

ALTERNATIVE DAY/DATE

SETTING THE DAY AND LANGUAGE:

1. Pull the button out to position "C".
2. Turn the hands clockwise repeatedly (through 24 hours each time) until you have selected the desired day and language.

Note: As soon as you have selected the desired day and language you must stop turning the button. Do NOT push the button back in to position "A".

3. Once you have selected the desired day and language, turn the hands anti-clockwise for a full 4 hours (the day will temporarily leave the date window and then re-appear). This indicates that the watch calendar is set to your desired language and when the day changes the language displayed will remain the same. Proceed to turn the hands clockwise until the desired time is reached.
4. Push the button back in to position "A".

Note: After completing the above process you may need to reset the date. If you need to reset the desired language to English, please repeat the above steps.

SETTING THE CORRECT TIME (AM/PM) – DATE WATCHES

- If the DATE changes when the hands are turned past 12 o'clock, the time shown is "am".
- If the DATE does not change, the time shown is "pm".

8

ALTERNATIVE DAY/DATE

SETTING THE TIME:

1. Pull the button out to position "C".
2. Turn the button to adjust the hour and minute hands to your desired time.

Note: Please choose the quickest route to your desired time, either clockwise or anti-clockwise, to ensure that you do not turn the hands a full 24 hours as this will change the day.

2. Push the button back in to position "A".

Note: Please check that the AM/PM is set correctly.

SETTING THE DATE:

1. Pull the button out to position "B".
2. Turn the button clockwise until the desired date appears.
3. Push the button back in to position "A".

IMPORTANT

• The date will change gradually between 9:00 pm and 4:00 am. Therefore, do NOT set the date during this time period as the date may not change properly. If it is necessary to set the calendar during this time period, first adjust the time to any time outside it, set the date and reset to the correct time.

• In case of bilingual day calendar, choose the desired language. When the day shifts automatically to the next day, the other language will appear temporarily.

9

QUARTZ "TWO-EYE" (MONTH & DAY) WITH DATE WATCH DAY & TIME SETTING:

- Pull button out to position "C".
- Turn button to advance hands until day changes; repeat until correct day and time is shown.
- Return button to position "A".

DATE & MONTH SETTING:

- Pull button out to position "B".
- Turn button clockwise until month changes (every 31 days).
- Repeat until correct month and date are shown.
- Return button to position "A".



10

QUARTZ "TWO-EYE" (DAY & DATE) WATCH (continued) DATE IN RIGHT EYE (continued) DATE SETTING:

- Pull button out to position "B".
- Turn button clockwise until date changes.
- Repeat until correct date is shown.
- Return button to position "A".

DATE IN LEFT EYE TIME SETTING:

- Pull button out to position "C".
- Turn button to advance hands.
- Return button to position "A".

DAY/DATE SETTING:

- Pull button out to position "B".
- Turn button anti-clockwise to set correct DAY.
- Turn button clockwise to set correct DATE.
- Return button to position "A".



11

QUARTZ "TWO-EYE" (DAY & DATE) WATCH IMPORTANT

IMPORTANT – The position of the day/date "eyes" referred to in these instructions MAY BE REVERSED on certain Models.

DATE IN RIGHT EYE – DAY & TIME SETTING:

- Pull button out to position "C".
- Turn button to advance hands until day changes; repeat until correct day and time is shown.
- Return button to position "A".

Date of Purchase

Retailers Stamp if required or full name and address

Attach Receipt or Proof of Purchase; failure to attach may invalidate guarantee. This guarantee does not affect your statutory rights.



IS01/07-17

Guarantee

Block Capitals

Name

Address

Post Code

Day time Phone

T.P. (UK) Ltd, Alexander House, Chartwell Drive, Wigston, Leicester LE18 2EZ

Important

This guarantee should be retained by the owner of the watch and should be sent to Sekonda together with the watch and £6.00 to cover handling and postage when service under guarantee is required. Please refer to page 1 of the instruction guide for further information on service under guarantee. This guarantee does not affect your statutory rights.